



RevNo	Revision note	Rev-By	RevDate	Signature	Checked

# **TOOLESS TYPE KEYSTONE JACK** **CUSTOMER NO: 17000473**

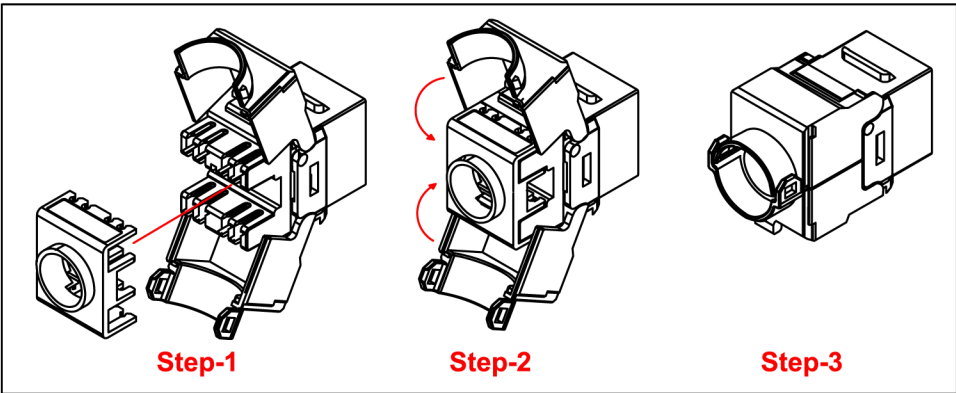

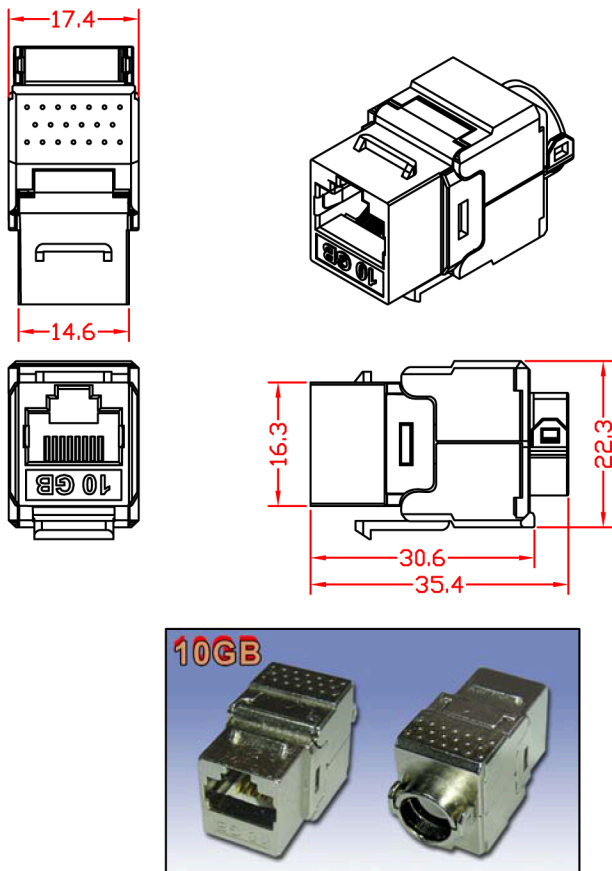







## **KEY FEATURES:**

- CAT.6A component checking TIA/EIA 568-B.2-10:2008
- Class EA ISO/IEC 11801:2002 / Amd.1:2008
- Specified to 500 MHZ
- 10 Gigabit/s Ethernet (IEEE 802.3an) to 100m

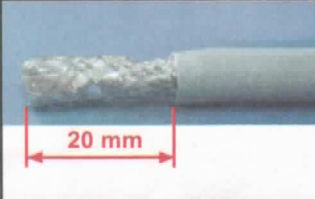







## **Instruction Guide**

ITEM NO.		17000473			
CUSTOMER NO.		17000473			
DESIGNED BY ALEX	DATE	1104-29	UNIT	MM	
	SCALE	xx	VER.	1	
NO.		Checked by			
APPR:		Approved by -date			
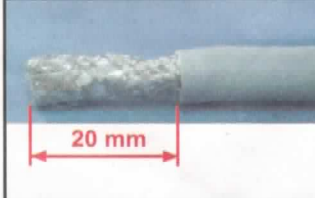
## Shielded Type Instruction Guide

	Strip PVC jacket at 20 mm Length.		Well Fitted the cover into IDC block.
	Put 4 pairs of wires into the cover.		Close the wings of IDC block.
	And than place the wires into the Block according to color.		Lastly tie the cable tie.
	Cut the extra wire.		Finished.

## Shielded Type Instruction Guide

	Strip PVC jacket at 20 mm Length.		Well Fitted the cover into IDC block.
	Put 4 pairs of wires into the cover.		Close the wings of IDC block.
	And than place the wires into the Block according to color.		Lastly tie the cable tie.
	Cut the extra wire.		Finished.