

1

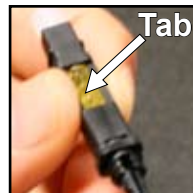
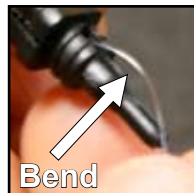
Insert fibre

Insert the pre-prepared fibre carefully in to the connector body, gently push the fibre towards the body until it stops.

**2**

Activate tab

Ensure that the fibre has a bend, then, using your index finger, press the button-like activator tab to commence the splice and crimp. Keeping the tab pressed while slowly releasing the bent fibre.

**3**

Remove the jig

Remove the plastic jig attached to the underside of the connector.

**4**

Complete the assembly

Tighten the screw-on boot to the terminated assembly and insert the ferrule sub assembly into the SC housing.

